

Connecting to my DVR on my local area network

Applies to: VDM, VDC, Vi-series, M-series

To control a Videoswitch DVR and view images across a local area network (LAN) you need to install viewer software on a PC:

VDM or VDC:	VDM connect
Vi-series:	Vi-Viewer
M-series:	Vi-Viewer with MPEG4

You can download the viewer software free from our website:

<http://www.oceansystems.co.uk/FreeSoftware.asp>

It is recommended that you upgrade the firmware in you DVR to the latest version which can be downloaded free from our website:

<http://www.oceansystems.co.uk/FirmwareUpdates.asp>

- Install the view software on you PC (Macs are not supported)
- Set the IP address on you DVR to an suitable unused one. If there is an IT department you may need to ask them to allocate one.
- Press connect on the viewer and add the DVR as a new site. You will need to enter the IP address that you have programmed into the DVR. You will also need to make the the port number is the same as set in the DVR. Normally the default port number can be used.
- Click on "Connect" and You should now be able to connect to the DVR and view images