

How to wire a Cmor dome to an Axis video server

Applies to: CMOR Vi-D1 Classic, Vi-D2 Evolution and Evolution-X

- ♦Go through the setup of the Axis module from the Axis manual.
- ♦Download the PTZ drivers for Pelco-D
- ♦Set up the CMOR Dome's protocol to Pelco-D. If it is a Vi-D2 Evolution, auto-protocol detection will automatically detect the protocol
- ♦ If a CMOR Vi-A16 alarm card is being used, set it's protocol to Pelco-D
- ♦Make sure the baud rate of the Axis server, the dome and the alarm card (if fitted) are all the same. The default for Pelco-D is 2400 baud
- ♦Connect the Rs485 output of the Axis server to the CMOR dome PSU.