

## R-Series Video Clip Export

One or more Video clips may be exported to a USB stick or to CDs or DVD's using the built-in DVD drive. These clips may be for one or more cameras.

- To enter playback mode press the **FIND** key, or right click the mouse and select Playback, or select Playback in the main menu.
- To select cameras make sure playback is paused. Move mouse pointer to right of screen and select which cameras you want in playback.
- Now select the day, move the mouse pointer to right of screen and use calendar to select which day you wish to view.
- To select the time required left click on the yellow time marker and drag it to the time required, now select **Play**.
- Now pause playback at start of clip you wish to export.
- Press **CLIP** key or left click with the mouse on the scissor icon near the bottom left of the screen.
- Now move the yellow time marker to the end of the video section to be exported.
- Press **CLIP** key again or left click with the mouse on the scissor icon to mark end of clip to be exported.
- Repeat steps above if there are other clips you require.
- Press **ESC** or **X** with the mouse to exit the screen, if clip size is ok to fit on your backup media, click on **YES**.
- Put in CD, DVD or USB memory stick and select the **Refresh** button.
- When ready, press **Export** to export. Wait until completed. Create duplicate copies as required.